

INSTALLATION INSTRUCTIONS FOR MODEL 384

WARNING!!!

TO PREVENT RISK OF ELECTRICAL SHOCK, DEACTIVATE/DISCONNECT POWER SUPPLY BEFORE INSTALLING OR RELAMPING FIXTURE.

TO REDUCE RISK OF FIRE OR EXPLOSION, DO NOT INSTALL WHERE THE MARKED OPERATING TEMPERATURE EXCEEDS THE IGNITION TEMPERATURE OF THE HAZARDOUS ATMOSPHERE(S).

THIS FIXTURE SHOULD BE INSTALLED BY QUALIFIED TECHNICIANS IN STRICT ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY LOCAL REQUIREMENTS.

INSTALLATION

1. INSTALL FIXTURE TO THE MOUNTING SURFACE AT THE TWO 3/8 INCH MOUNTING HOLE LOCATIONS. POSITION FIXTURE AND TIGHTEN THE FOUR POSITIONING BOLTS.
2. SUPPLY CONNECTIONS TO BE THREE CONDUCTOR, #14, TYPE CABLE RATED MIN. 90 DEG. C.
3. A CABLE CONNECTOR MUST BE INSTALLED INTO THREADED OPENING. SLIDE WIRE INTO CABLE CONNECTOR FAR ENOUGH TO MAKE INTERNAL WIRE CONNECTION.
4. CONNECT INTERNAL WIRES PER WIRING DIAGRAM ON THE BALLAST, ACCORDING TO NEC REQUIREMENTS.
5. INSTALL REFLECTOR AND LAMPS.
6. CLOSE FIXTURE, TIGHTEN LATCHES.
7. WHEN REPLACING BALLAST, USE ONLY CLASS P TYPE BALLAST.

LDPI, INC. 384 MARINE

ITEM NUMBER	PART NUMBER	DESCRIPTION	NO. REQUIRED
1	3003-4	DOOR FRAME ASSEMBLY FOR 4 FT.	1
1-A	3003-2	DOOR FRAME ASSEMBLY FOR 2 FT.	1
2	FF48T12	FLUORESCENT BULBS 4 FT.	2
2-A	F24T12HO	FLUORESCENT BULBS 2 FT.	2
2-B	F40T120W	FLUORESCENT BULBS 4 FT.	2
2-D	F32T8/SPX41	FLUORESCENT BULBS 4 FT.	2
2-F	F40/308X/SPX41	FLUORESCENT BULBS 2 FT.	4
3	3004-4	REFLECTOR FOR 4 FT.	1
3-A	3004-2	REFLECTOR FOR 2 FT.	1
4,5,6,11	3005	SCREW HARDWARE	7
7	523	SPRING LOADED SOCKET FOR HO MODELS	4
7-A	101681	BI-PIN SOCKET FOR T8/T12 MODELS	4
7-B	101485	SOCKET FOR T5 MODELS	4
8	3010	LINK LOCKS	4
9	3001	BALLAST - INPUT VOLTAGE - LAMP DESIGN	1
10	3007-4	HOUSING 4 FT.	1
10-A	3007-2	HOUSING 2 FT.	1
12	3002	MOUNTING BRACKET	2
12-A	3002-A	ANGLE MOUNTING BRACKET	2
13	SC	SAFETY CABLE	1
14	EB	EYE BOLT	1

